

Step 1. Turning On the Unit

Turn on the container via the power switch located on the control panel and wait for a few seconds as the system boots up. Check for battery status and container status. The unit should be charged to >90% and in idle mode.



Step 2. Shipment Set-Up


To initiate a shipment place the unit into shipment mode as follows: From the MAIN menu screen, scroll down and select option 8 – “SUPERVISOR MENU” and then press the [enter] key.

Step 3. Supervisor’s Password

When prompted, enter the supervisor’s password “54321” and then press the [enter] key. Press the [enter] key again to continue.

Step 4. Initiate Shipment

From the SUPERVISOR menu screen, select option 1 – “INITIATE SHIPMENT” by pressing the [enter] key.

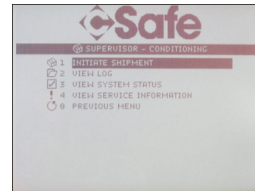

Step 5. Shipment Information Input

Enter the shipment information using the keypad and entering the data as prompted:


1. Waybill number (24 character limit)
2. Set-point temperature
3. New password (recommend using waybill number)
4. Verify password

Press the [enter] key to advance to the next data input field.



Step 6. Completion

The RKN will then go into Shipment Mode and show all of the shipment parameters entered from the previous screen.

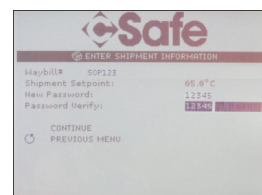

4 Key Points to a Successful Shipment:

- Power **ON**
- Set-point temperature verified
- Battery status at or near **100%**
- Container in **Shipment Mode**

