


If you would like to download data from your CSafe RAP, follow the instructions below.


Step 1. Click “Download Log File”

From the MAIN menu screen, select option –“**DOWNLOAD LOG FILE**” and press the [enter] key

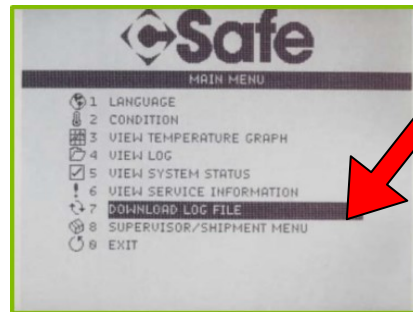


Step 2. Select your Waybill number

Select the “**waybill number**” you wish to view by using either the ↑ or ↓ arrow keys to highlight the waybill number and press the [enter] key.

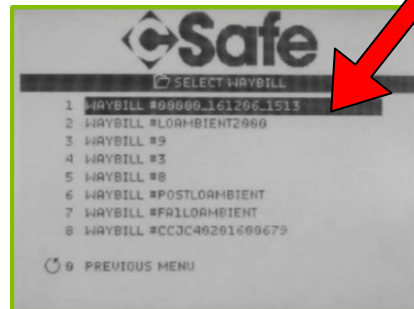

Step 3. Download to USB Drive

If prompted; select option 1 – “DOWNLOAD TO USB DRIVE” by using either the ↑ or ↓ arrow keys and then select by pressing the [ENTER] key.

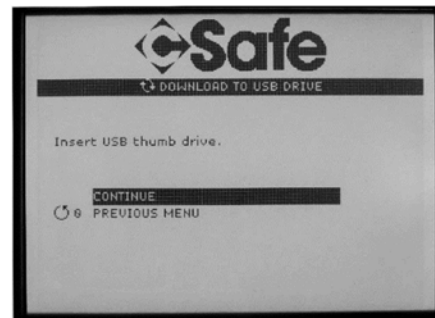

Step 4. Insert USB

Insert an empty USB thumb drive into the USB port on the front of the control panel. Press the [enter] key.



Step 5. Wait for Connection

“Searching for USB drive” will be displayed while the software looks for a thumb drive inserted into the USB port.



Step 6. Automatic Download

Once the USB drive is detected, the CSafe RAP will automatically start to download the individual lines of data. The display will show the total number of lines of data stored and count down to zero indicating each line has been transferred.



Step 7. Completion

Use CSafe Log File Decryption Software and Instructions to decrypt and chart data. Software and instructions are available by contacting:
TechSupport@CSafeGlobal.com

After all the data is transferred, the display will automatically return to the DOWNLOAD LOG DATA screen.

