


CSafe RKN Download Data Log Files

If you would like to download data from your CSafe RKN, follow the instructions below.

Step 1. Click “Download Log File”

From the MAIN menu screen of the RKN, select option 7 –“**DOWNLOAD LOG FILE**” by pressing the [enter] key

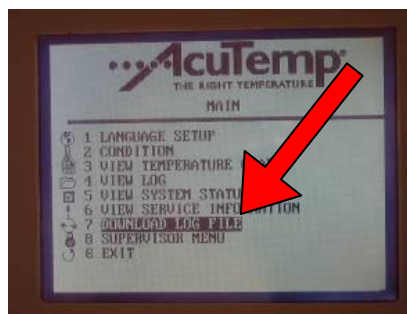


Step 2. Select your Waybill number

Select the “**waybill number**” you wish to view by using either the ↑ or ↓ arrow keys and select by pressing the [enter] key.




Step 3. Download to USB Drive

From the DOWNLOAD LOG DATA menu screen, select option 1 – **“DOWNLOAD TO USB DRIVE”** by using either the ↑ or ↓ arrow keys and then select by pressing the [enter] key.

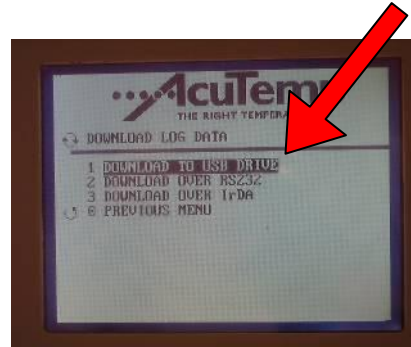


Step 4. Insert USB

Insert an empty USB thumb drive into the USB port on the front of the control panel. Press the [enter] key.

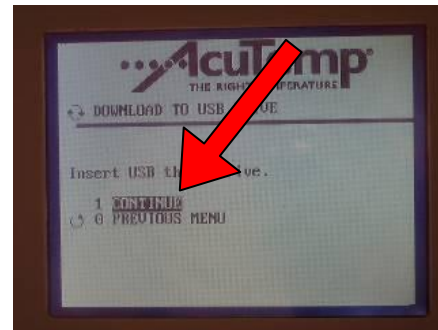

Step 5. Wait for Connection

“Searching for USB drive” will be displayed while the software looks for a thumb drive inserted into the USB port.

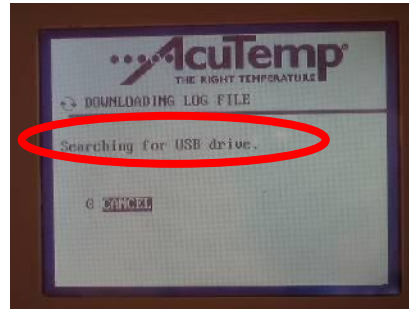

Step 6. Begin Download

Once the correct connection is found, the RKN will start to download the individual lines of data. The display will show the total number of lines of data stored and will count backward down to zero as each line of data is transferred.

Step 7. Completion

After all the data is transferred, the display will automatically return to the DOWNLOAD LOG DATA screen.

