



CSafeRAP

Active Temperature-Controlled Air Cargo Container

The CSafe RAP is the latest innovation in high-performing active temperature-controlled containers. Thoughtfully designed to support pharmaceutical and life science companies with air cargo transportation of temperature-sensitive products to patients around the world. Developed and designed with performance in mind, the CSafe RAP utilizes innovative heating and compressor-driven cooling technologies together with advanced vacuum insulated panel (VIP) insulation to eliminate the risks to payloads associated with extreme ambient temperature conditions and long-duration shipments. The CSafe RAP leverages the proven performance and capabilities of the well-established CSafe RKN to remove the operational and environmental challenges encountered with temperature-controlled shipments.




Key Features



Advanced active container system




Unmatched operational capabilities in extreme ambient temperatures

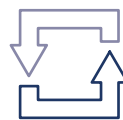

Innovative air recirculation system (ARS) for complete encapsulation of payload



Superior VIP insulation



Largest RAP payload in industry



End-to-end real-time shipment visibility with alerts



Array of 10 temperature sensors throughout cargo compartment



User-selectable temperatures from +4°C through +25°C



PAYLOAD (LITERS)
6680



TEMPERATURE RANGE
+2°C to +8°C
+15°C to + 25°C





DURATION (HOURS)
120+

PRODUCT NAME	PAYLOAD	TEMPERATURE RANGE	DURATION	INTERNAL SPACE L x W x H	EXTERNAL DIMENSIONS L x W x H	TARE WEIGHT	MAXIMUM PAYLOAD WEIGHT	MAXIMUM ALLOWABLE WEIGHT
CSafe RAP	6680 L 236 cu ft	+2°C to +8°C +15°C to +25°C	120+ hrs	2477 x 2083 x 1295 mm ³ 97.5 in x 82 in x 51 in	3175 x 2235 x 1626 mm ³ 125 in x 88 in x 64 in	1213 kg 2675 lbs	4819 kg 10,625 lbs	6,033 kg 13,300 lbs

Power Features

- Power sources:
 - AC power (100-240 V, 50-60 Hz)
 - Internal batteries (regulatory approved, sealed, nonspillable design that meets Dangerous Goods Regulations)
- Rechargeable anywhere in the world with included multisystem charging cables
- Rapid battery charging, from 0% to 100% in only 10 hours
- Run time >120 hours for typical shipments

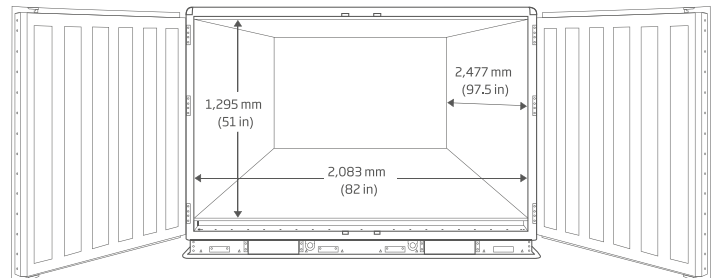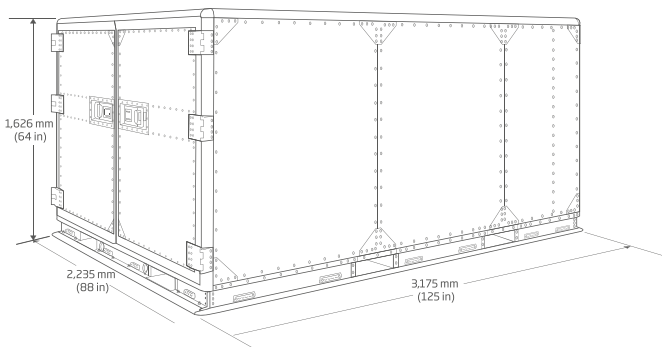

Contact us at sales@csafeglobal.com

CSafe has a worldwide network of comprehensive service centers, manufacturing facilities, sales offices and local hub sites to provide solutions where and when you need them. With representatives across the Americas, EMEA and APAC, local and regional support is always available.